



# UNLEASH YOUR TRUE COLOURS

## BradyJet™ J7300

COLOUR LABEL PRINTER

Make a statement with inkjet made for industrial spaces

FULL COLOUR



INDUSTRIAL STRENGTH



AUTO SETUP



### BRILLIANT COLOURS SMART OPERATION



**AUTO SETUP**

No threading needed, auto calibrates and prints on the first label.



**FAST FLEXIBILITY**

Intuitive software lets you create and print any colour, any information, anytime.



**INSTANT ANALYTICS**

Label and ink level alerts, cost calculator and remote monitoring.

### Industrial excellence. Innovative ease. Inkjet elevated.

Pivot through a demanding print queue with the J7300

#### Do exactly what the job demands with these advanced features:

- ▶ Minimal material changeovers and streamlined inventory
- ▶ Compliance-driving pictograms and templates for ISO, CLP/GHS, IMO and more
- ▶ Full-colour graphics, photos and logos
- ▶ Smear-free instant-drying ink
- ▶ Industrial-grade construction and quiet operation
- ▶ Purpose-built labels last years
- ▶ USB, Wi-Fi or ethernet connectivity
- ▶ Label creation software included plus Windows® driver for third party

# BradyJet™ J7300

INDUSTRIAL EXCELLENCE  
INKJET ELEVATED

## Get the job done right for any application

Enjoy fast, industrial-grade colour and production for variable print jobs



### SAFETY & FACILITY

- ▶ Lean/5S, ISO 20560 pipe marking, ISO 7010 safety signs, IMO marine signs, lockout tagout, custom signage
- ▶ Enhanced colour matching and best-match regulatory palettes
- ▶ Premade label layouts and templates



### LAB & CHEMICAL

- ▶ GHS & CLP, marine (BS 5609), barcoding, slides, tubes, vials
- ▶ On-demand colour helps reduce errors and differentiate information
- ▶ Labels and inks resist water, chemicals and abrasions





### PRODUCT IDENTIFICATION

- ▶ UL product/component ID, instructional labels, work in process, assets, bins
- ▶ Customised colours, headers and logos
- ▶ True black ink cartridge delivers sharp text and barcodes

## Print on purpose-built materials for the environments you face

### A few J7300 label materials you need to know about

To view all available material options, visit [bradyeurope.com/J7300materials](http://bradyeurope.com/J7300materials).

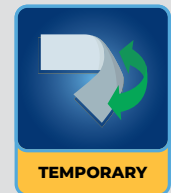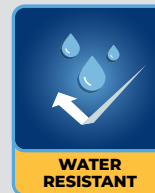

Material	CHEMICAL RESISTANT	WATER RESISTANT	FADE RESISTANT	TEMPORARY
B-7425J   Polypropylene - Lab and GHS				
B-2595   Vinyl - Safety Identification				
B-2569   Polyester - Curved Surface				
B-2581   Repositionable Vinyl - Lean 5S Facility				
B-2551   Tagstock - Lockout Tagout				
B-2585   Polypropylene - CLP & GHS, drums				
B-2509   Magnetic Media - Temporary				
B-2550   Paper Ideal - Short Term				
B-403   Dissolvable Paper - Temporary				
B-2475   Polyester - UL				
B-2492   Polyester - Frozen Surfaces				
B-2414   BradyGrip® Print-on Hook Labels - VELCRO® Brand ONE-WRAP® Roll				

= Unique Brady material

▶ Learn more at [bradyeurope.com/J7300](http://bradyeurope.com/J7300) or scan to watch the overview video.



# BradyJet J7300 specifications

Printer Specifications	
Print Technology	Inkjet
Print Resolution (dpi)	4800
Print Speed (mm/sec)	30.48
Colour Capability	Full Colour
Max. Label Width (mm)	107.95
Min. Label Width (mm)	17.78
Recommended Usage per Day	5000
Internal Memory Capacity	32 GB, expandable through USB
Connectivity Options	Ethernet USB-C Wi-Fi USB Host
Software Compatibility	Brady LINK360® Brady Workstation Windows based driver for 3rd party software use
Bar Code Type	More through Brady WorkStation, More through software, More through Brady Workstation
Built-in Symbols	Dependant on software
Physical Properties	
Dimensions	376.30 mm (W) x 230.89 mm (H) x 515.70 mm (D)
Weight (kg)	16.33
Device Indicators	Application LED Power LED
Cutter	After label, at end of job or no cutoff Standard Cutter Straight Cut Without label retention
Warranty	2 years



# BradyJet J7300 printers



Article No.	Order Reference	Description
176883	J7300-EU	BradyJet™ J7300 Colour Label Printer EU
176884	J7300-W-EU	BradyJet™ J7300 Colour Label Printer, Wi-Fi, EU
322658	J7300-UK	BradyJet™ J7300 Colour Label Printer UK
322659	J7300-W-UK	BradyJet™ J7300 Colour Label Printer, Wi-Fi, UK

This BradyJet™ J7300 Printer ships in a cardboard box with a CMY Ink Cartridge with built in Printhead, a Black Ink cartridge with built in Printhead, a Brady Workstation Basic Software, a J-Align roll, a media starter B-2595 Vinyl roll, an AC Adapter, a Power Cord, a USB cable and a USB Flash Drive with product information.

**Brady Workstation Basic Design** helps you create any label you need with premade templates, custom options and step-by-step instructions

# BradyJet J7300 kits



Article No.	Order Reference	Description
322660	J7300-EU-BWS	BradyJet™ J7300 Colour Label Printer EU + Brady Workstation Suite
322661	J7300-UK-BWS	BradyJet™ J7300 Colour Label Printer UK + Brady Workstation Suite
322666	J7300-W-EU-BWS	BradyJet™ J7300 Colour Label Printer, Wi-Fi, EU + Brady Workstation Suite
322667	J7300-W-UK-BWS	BradyJet™ J7300 Colour Label Printer, Wi-Fi, UK + Brady Workstation Suite

This BradyJet™ J7300 Printer ships in a cardboard box with a CMY Ink Cartridge with built in Printhead, a Black Ink cartridge with built in Printhead, a license for Brady Workstation Software suites, a J-Align roll, a media starter B-2595 Vinyl roll, an AC Adapter, a Power Cord, a USB cable and a USB Flash Drive with product information.

**Brady Workstation Advanced Suite:** Product & Wire Identification, Safety & Facility Identification, or Lab Identification, enabling easy creation of a wide range of labels and signs.

**Omser (Scotland) Ltd**  
 School Road, Gartocharn  
 By Alexandria, G83 8RT  
 T: 01389 830 408 F: 01389 830 349  
 sales@omser.co.uk www.omser.co.uk



▶ Learn more at [bradyeurope.com/J7300](http://bradyeurope.com/J7300) or scan to watch the overview video.

